Print on Plain White Paper (Part No. 122919)

Ritter

Installation Instructions

9A0200X Armboard Assemblies

KIT COMPONENTS

Part Number	Description	Qty.
9A02003	Armboard Assembly w/ 1 bracket	1
or		
9A02004	Armboard Assembly w/ 2 brackets	1
003-0177-00	Installation Instructions	1

REQUIRED TOOLS

Phillips Head Screwdriver
9/16” and 5/8” Open End Wrench
Power Hand Drill
3 / 32” Drill Bit
Measuring Tape

IMPORTANT INSTRUCTIONS

Provides a means to hold an arm in a secure position.

EQUIPMENT ALERT
Do not use simultaneously on same side of table with 9A21000X Siderail.

INSTALLATION (1)

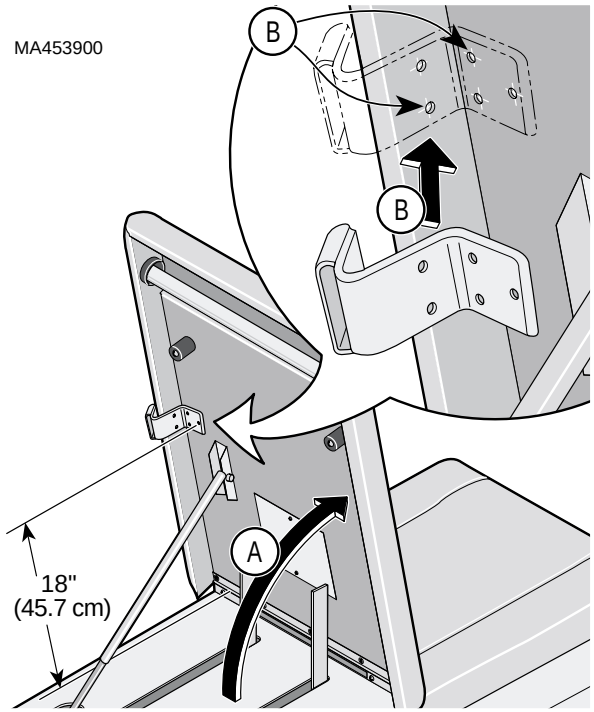

A. Place backrest in maximum “Up” position.

B. Position bracket so center of bracket is 18” (45.7 cm) up from center of hinge, and mark location of mounting holes.

INSTALLATION (2)

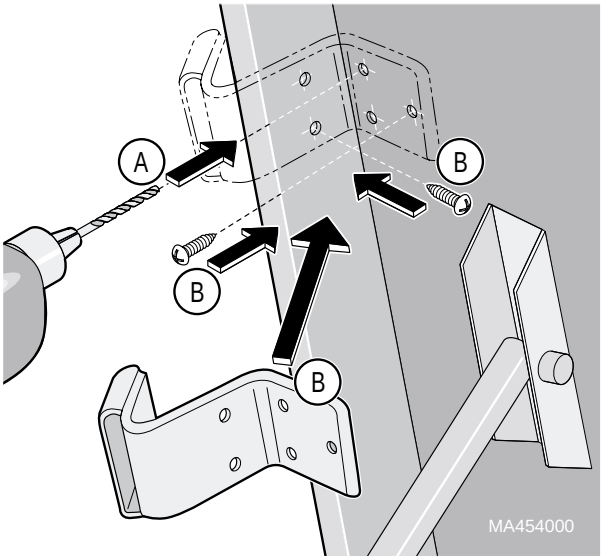

EQUIPMENT ALERT
Do not drill any deeper than 1/2” (1.3 cm) when drilling mounting holes for bracket.

A. Using 3/32” drill bit, drill holes 1/2” (1.3 cm) deep at location marks.

B. Install bracket and secure with (5) #10-12 x 1” (2.54 cm) screws.

INSTALLATION (3)

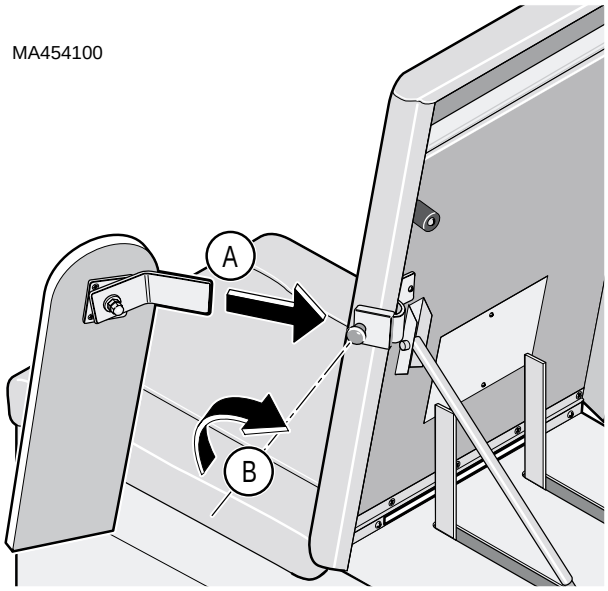

A. Install armboard onto bracket.

B. Tighten clamping knob.

© Midmark Corporation - 2000

OPERATION & ADJUSTMENT

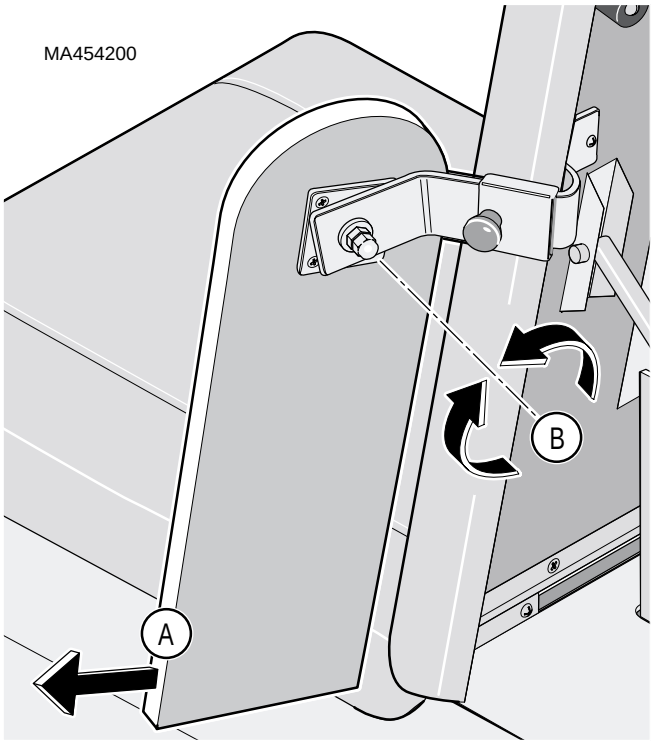

A. Rotate Armboard to desired position.

NOTE

If Armboard is difficult to rotate or will not hold position adjustment may be required.

B. Loosen cap nut then; tighten or loosen jam nut to achieve desired rotational action and retighten cap nut.

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542

003-0177-00 Rev. E (12/00)

© Midmark Corporation - 2000